

# LUS-75 Camp Unit

Houseboat Outlet, Inc.

329 Hardware Rd.  
Broussard, LA 70518  
337-330-4408  
houseboatoutlet.com

Approved by the Louisiana Department of Public Health and Hospitals as a Limited Use Sewage System.

## Includes:

- 120 Volt AC Air Pump
- Hose and Hose Adapter
- Louisiana State ID Tag
- Blue Crystal Disinfecting Tablets
- Sum of Dat Bio-Activator & Waste Degradar
- Sum of Dat Bio-Enhancer & Odor Controller

A Licensed Plumber IS NOT required for the installation of this unit.

## Selecting a Location

- The unit may be buried or above ground but it must be placed on level ground.
- The Sewage pipe from the toilet to the unit must run at a slight horizontal slope.


## Plumbing

- Slip 3" PVC sewage pipe into the 3" Sewage Inlet\*
- Gray Water (Sinks and Showers) must be run separately to the unit. Connect 1 1/2" PVC Grey Water pipe to the 1 1/2" Grey Water Inlet. A pipe connector is needed here.
- Slip 1 1/2" PVC drain pipe into the 1 1/2" discharge Outlet\*
- Slip 1 1/2" PVC vent pipe into 1 1/2" Vent connection\*. Make sure there are no sags or loops in the pipe.
- Connect AC air pump to the 1/2" FPT Air inlet using vinyl hose and 1/2" Nylon MPT hose adapter (included).

\* = No pipe connector required

**Note: If unit is to be buried, do not back-fill prior to state inspection.**

**"Keeping Our Waters Kleen"**

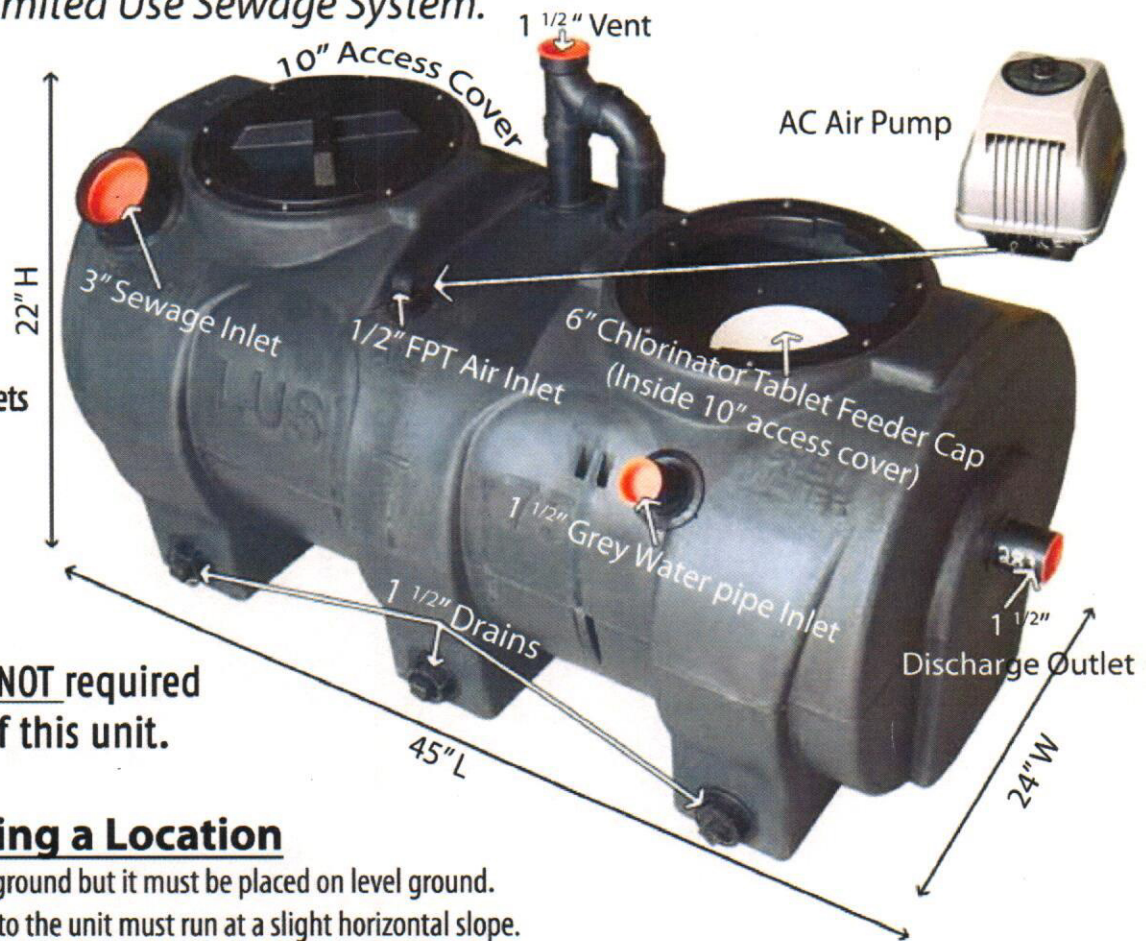

## Startup Procedures

- Unit must be completely filled with water prior to introducing sewage.
- Remove both 10" access covers and the chlorinator tablet feeder cap. Fill the unit with water through 10" access closest to the sewage inlet. Continue filling until water begins to flow through the chlorinator tablet feeder.
- Stop filling the unit and place two Blue Crystal Disinfecting tablets inside the chlorinator tablet feeder.
- Replace chlorinator tablet feeder cap and both access covers.
- Unit is now ready for operation.

## Maintenance

- Flush 4 packets of Sum of Dat Bio-Activator & Waste Degradar and 2 oz. of Sum of Dat Bio-Enhancer & Odor Controller down toilet to **kick-start** unit.
- Once per week, add 1 packet of Sum of Dat Bio-Activator & 1 oz. Sum of Dat Bio-Enhancer & Odor Controller to maintain peak performance.

Revised 5/18